




OPTIONAL: BOLT DOWN

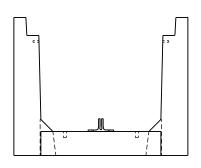


SET DIVIDER BASE INTO DESIRED POSITION WITHIN CHANNEL

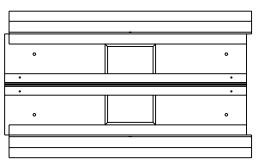

DRILL HOLES THROUGH THE DIVIDER BASE AND INTO THE CHANNEL A MASONRY BIT IS RECOMMENDED

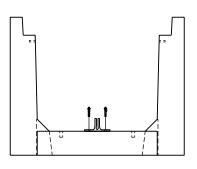

CLEAR DEBRIS FROM HOLES AND HAMMER ANCHOR PIN BOLTS (APB25-1.25) INTO DRILLED HOLES

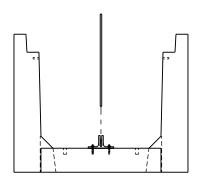

PRESS PANEL INTO DIVIDER BASE PER BASIC INSALL OR OPTIONAL: ADHESIVE GUIDELINES

DRAWN BY: JESSE GUTTING

CREATED DATE: 7/8/2024 REVISION LEVEL: 0
SAVED DATE: 7/11/2024 SAVED BY: jgutting

WEIGHT:

MATERIAL: FRP



1010 NORTH STAR DRIVE P.O. BOX 69 ZUMBROTA, MN 55992-0069

DESCRIPTION:

INSTALL GUIDE

DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL: ± 1/8"
ANGULAR: ± 2°

CONTACT INFORMATION: EMAIL: INFO@CONCASTINC.COM PHONE: (507) 732-4095 FAX: (507) 732-4094

SHEET 1 OF 1

PART NUMBER:

FRP DIVIDER INSTALL